






Handling instructions

HSK coolant tubes


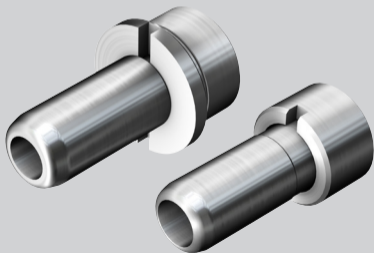


HSK DIN69893-1 / ISO12164-1

 Basic holder
Coolant tube
5692 020-

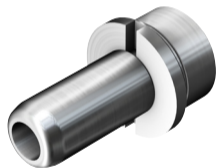

 Solid tool holder
Coolant tube
5692 022-

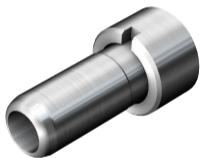

Coolant tubes				
HSK A/C/T- size	Basic holder	Solid holder	Key	Torque (Nm)
40	5692 020-02	5692 022-02	5680 094-02	10
50	5692 020-03	5692 022-03	5680 094-03	15
63	5692 020-04	5692 022-04	5680 094-04	20
80	5692 020-05	5692 022-05	5680 094-05	25
100	5692 020-06	5692 022-06	5680 094-06	30
125	5692 020-07	5692 022-07	5680 094-07	30
160	5692 020-08		5680 094-08	30

Head office:

AB Sandvik Coromant

SE-811 81 Sandviken, Sweden

www.sandvik.coromant.com

E-mail: info.coromant@sandvik.com

92038

© AB Sandvik Coromant

2016.03

